



# **Aqua- Fountain**

## **AF50 • AF100 • AF1002**

### **INSTALLATION INSTRUCTIONS**

Thank you for your purchase of an EasyPro Aqua-Fountain. The Aqua-Fountain will enhance the beauty of your pond or lake with reliable performance. Each EasyPro Aqua-Fountain comes assembled for easy installation.

The AF50 (1/2 hp, 115 volt) and AF100 (1 hp, 115 volt) models come with a timer and GFCI panel. The AF1002 does not have a timer or GFI. *These must be purchased locally for proper operation of this unit.*

#### **SAFETY AND HANDLING INSTRUCTIONS**

- Under **NO** circumstances should anyone enter the water with the electrical equipment plugged in and/or in operation.
- Exercise caution with any electrical equipment with moving parts.
- Never run the unit out of the water. This can cause damage to the unit and is dangerous for the operator.
- Never lift or pull the unit by the power cord.
- Do not use waders in deep ponds/lakes or pond/lakes with drop offs, drastic slopes or soft bottom material.
- Do not use boats that tip easily for fountain installation. Follow all boating safety rules and regulations, including wearing a PFD (personal flotation device).
- To reduce the risk of electric shock the units should be plugged into a GFCI breaker that is properly grounded. Be sure to test the GFCI breaker upon installation and every month thereafter to ensure proper operation.

#### **INSTALLATION**

**1** Remove unit and power cord from packaging. Inspect unit for any damages in shipping. Notify the shipping company immediately or your EasyPro dealer about any damage. (Optional Step: A light kit can be installed on the unit before installing unit in the water. Follow the instructions for the EasyPro SLK2N (two light kit) or SLK3N (three light kit) that come with the light kit.)

**2** Choose your nozzle. To change the nozzle (umbrella or rocket spray) simply remove the gray cover and thread the nozzle into fountain head.




Umbrella Nozzle



Rocket Nozzle

**3** The unit comes preassembled and ready for installation. Determine the position of the unit in the lake/pond. To anchor the unit in position, cut two lengths of 1/4" polyethylene rope, allowing approximately 2' - 3' of rope per 1' of water depth. Tie one end of each rope to the float bottom with a secure knot. The other end of each rope can be secured to a standard 8" x 8" x 16" concrete block (see diagram).

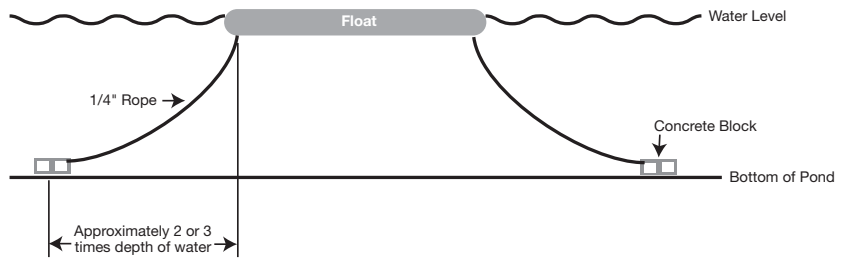

**4** Mount the control panel on a post near pond edge. Be sure to follow all national and local electric codes. The control panel should be installed upright to maintain proper weather proofing. The AF50 (1/2 hp, 115 volt) and AF100 (1 hp, 115 volt) models come with a timer and GFCI panel. The AF1002 does not have a timer or GFI. *These must be purchased locally for proper operation of this unit.*

**5** Set the timer for the unit and plug in the unit and lights. Enjoy your EasyPro Aqua-Fountain!

Part #	HP	Voltage /Amps	Approx. GPM	Rocket Spray Dimensions	Umbrella Spray Dimensions
AF50	1/2	115/6.0	60	8' H x 2' Dia	6' H x 15' Dia
AF100	1	115/11.5	90	16' H x 5' Dia	8' H x 26' Dia
AF1002	1	230*/6.5	90	16' H x 5' Dia	8' H x 26' Dia

### Warranty:

This product has a limited warranty against any mechanical or material defects for a period of two years from the date of purchase. Warranty only covers properly installed and maintained units.

The warranty does not cover normal wear and tear, nor any deterioration suffered through overloading, improper use, negligence or accident. Similarly, any modification made by the purchaser to the product will cause the warranty to be null and void.

All returned items will be inspected to determine cause of failure before warranty is approved.

Warranty does not cover any cost associated with the installation or removal of the product subject to warranty claim.

An RA number must be obtained by calling EasyPro Pond Products at 800-448-3873. It is your responsibility to pay the return shipping charges. Be sure to include the RA number, original receipt (in the form of an invoice or sales receipt), name, return address and phone number inside of the package. No warranty claims will be honored without the original receipt.

Ensure the product is properly packaged and insured for the replacement value. Damage due to improper packaging is the responsibility of the sender.

The manufacturer or supplier shall not be held liable for any damages caused by defective components or materials of this product; or for loss incurred because of the interruption of service; or any consequential/incidental damages and expenses arising from the production, sale, use or misuse of this product.

The manufacturer or supplier shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this product.





## Aqua Fountain Limited Two Year Warranty

EasyPro Pond Products, 4385 East 110th, Grant, MI 49327, hereby warrants, subject to the conditions set below, that should the Aqua Fountain prove defective by reason of improper workmanship or materials, any time during the first 24 months from date of delivery to Purchaser at retail only, EasyPro shall repair or replace the said aerator as may be necessary to restore it to satisfactory operation condition, without any charge to the customer. This warranty will be honored, provided that:

- A. The warranty registration at the bottom of this page is filled out and returned to EasyPro within 15 days of original receipt by the purchaser.
- B. The fountain must be delivered or shipped, freight prepaid, in its original container or one offering equal protection, to EasyPro for repair or replacement.
- C. The Aqua Fountain must not have been altered, repaired or serviced by anyone other than EasyPro.
- D. The Aqua Fountain must not have been subject to lightning strikes or other acts of God, freeze-in, vandalism, accident, misuse or abuse and must have been installed in conformance with applicable electrical codes (including proper electrical protection).

No implied warranties of any kind are made by EasyPro in connection with this fountain and no other warranties, whether expressed or implied, shall apply to this fountain. Should this fountain prove to be defective in workmanship or material, the sole remedy shall be repair or replacement as is herein above provided and, under no circumstances, shall EasyPro be liable for any loss, damage or injury, direct or consequential, arising out of the use of, or inability to use, the Aqua Fountain; including but not limited to retail purchaser's cost, loss of profit, goodwill, damages due to loss of product or interruption of service, or personal injuries to purchaser or any person.

### Customer Information:

HP \_\_\_\_\_ Serial Number \_\_\_\_\_ Date of Purchase \_\_\_\_\_

----- *Please detach and return within 15 days of purchase* -----

Name \_\_\_\_\_ Address \_\_\_\_\_

City, State, Zip \_\_\_\_\_ Phone \_\_\_\_\_

HP \_\_\_\_\_ Serial Number \_\_\_\_\_ Date of Purchase \_\_\_\_\_

### **Please return to:**

EasyPro Pond Products  
4385 East 110th, Grant, MI 49327  
Phone: 231-834-7720 • Fax: 231-834-5537